

**ASSEMBLY & INSTALLATION INSTRUCTIONS  
FOR EXTENSION FLUE PIPE  
PART #20476486**

---

**NOTE:** This extension flue pipe is for use with Instantaneous Kerosene Fired Water Heater BS-36UFF installation in wall thickness from 10-5/8 in. (270mm) to 18-1/8 in. (460mm).


**WARNING:** RISK OF INDOOR AIR POLLUTION

To prevent air pollution from leaked products, flue pipe and extension flue pipe should be connected securely.

**CAUTION:** When using “Extension flue pipe”, the wall thickness must be at least 10-5/8 in. (270mm) but no more than 18-1/8 in. (460mm).

**INSTALLATION OF EXTENSION FLUE PIPE**

1. Install the extension flue pipe to the inner flue pipe. Secure the extension flue pipe clockwise until it stops.

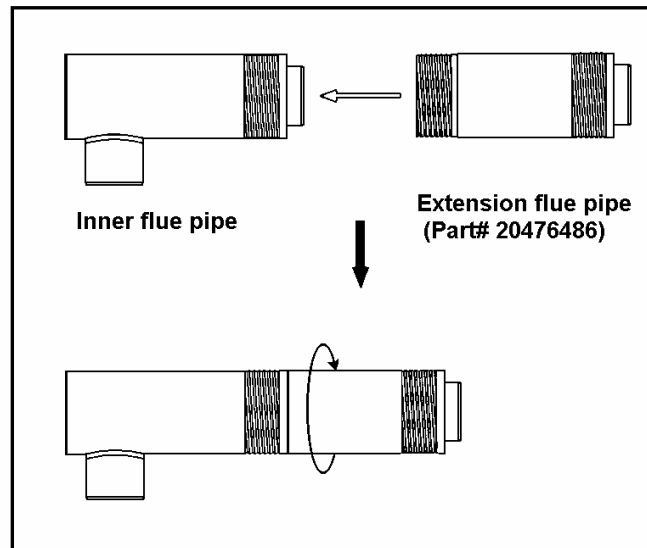

2. Install the outer flue pipe as described in “Installation of Unit and Flue Pipe” of BS-36UFF Installation manual.

Printed in Japan  
2604001802